



Switch Removal Quick Reference

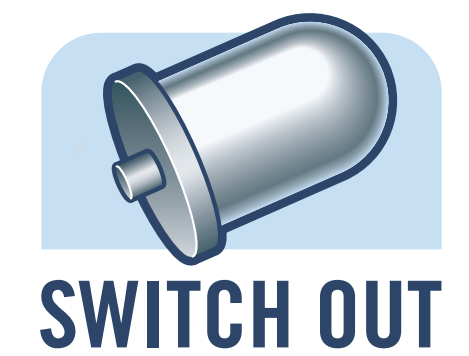


Mercury Convenience Lighting Switches

Mercury ABS G-Force Sensor Modules




Typical Light Switches

Look for Switches Here

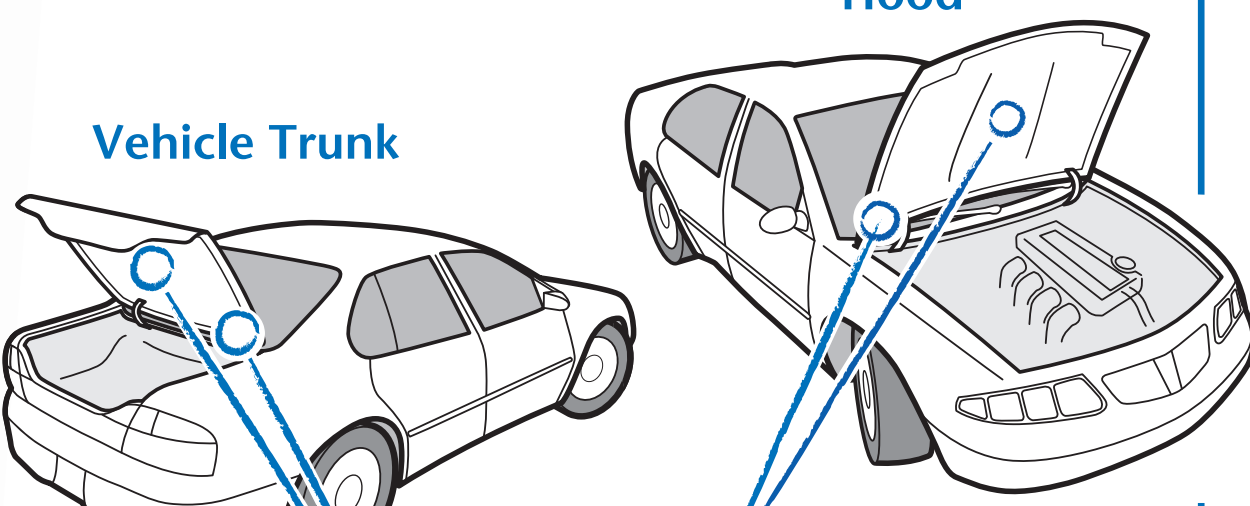


Vehicle Trunk

Hood

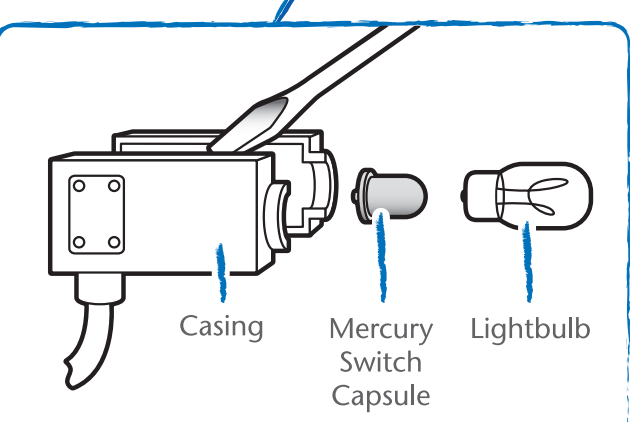


Casing Mercury Switch Capsule Lightbulb



Typical ABS Module

Look for Modules Here

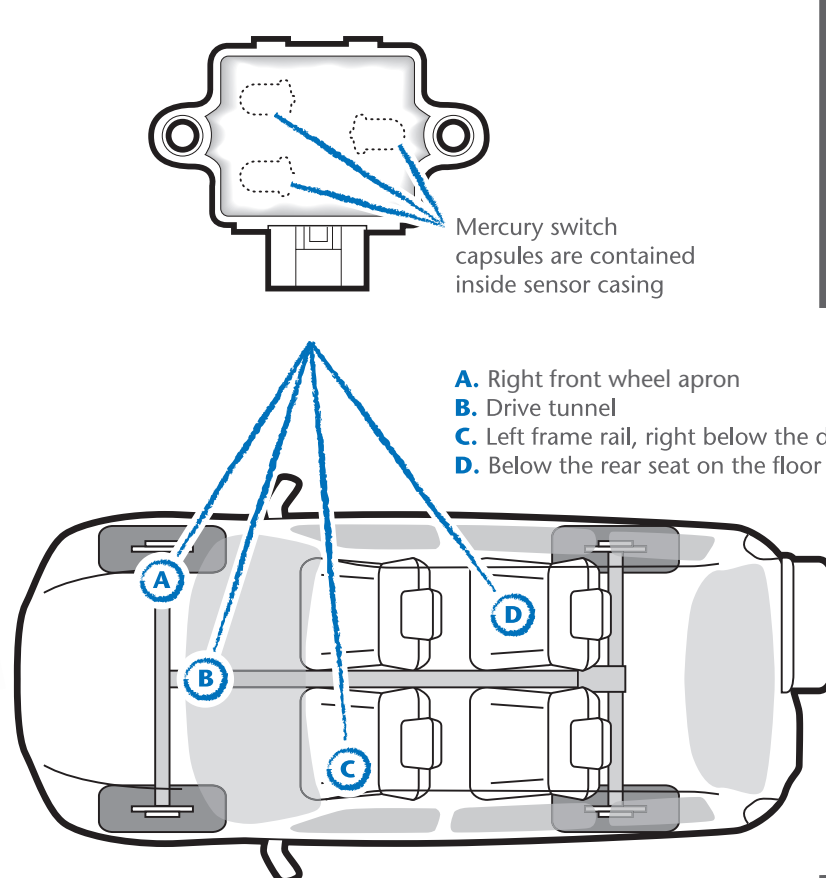

Mercury switch capsules are contained inside sensor casing

A. Right front wheel apron
B. Drive tunnel
C. Left frame rail, right below the driver
D. Below the rear seat on the floor pan

Simple Steps for Light Switch Removal

- 1 Disconnect the battery.
- 2 Locate the lighting assembly.
- 3 Cut the power supply to the fixture.
- 4 Remove any fasteners to separate the entire lighting assembly.
- 5 Break open the lighting assembly to expose the mercury switch capsule.
- 6 Remove the mercury switch capsule and place it in the *Switch Out* collection container.

Makes and Models Containing Convenience Lighting Switches

HOOD AND/OR TRUNK

| | |
|-----------------------|----------------|
| Audi 100 | 1977-1988 |
| Audi 200 | 1980-1988 |
| Chrysler | 1998 and older |
| Ford | 2001 and older |
| General Motors | 2002 and older |
| Mazda Navajo | 1993-1997 |
| Mazda B-Series Pickup | 1995-1999 |
| Porsche | 1976-1991 |
| Volvo | 1991 and older |

SUNVISOR VANITY MIRROR

| | |
|-------|----------------|
| Volvo | 1991 and older |
|-------|----------------|

Makes and Models Containing ABS Sensor Modules

| | | |
|----------|-----------|-------------------------|
| Audi | 1987-1993 | Audi 100/Avant |
| | 1989-1995 | Audi V8 |
| | 1987-1991 | Audi 200 |
| | 1987-1992 | Audi Coupe Quattro |
| | 1987-1992 | Audi 80/90 |
| Chrysler | 1992-1996 | Dodge Stealth 4WD |
| | 1992 | Eagle 200 GTX AWD |
| | 1992-2001 | Jeep Cherokee |
| | 1993-2001 | Jeep Grand Cherokee |
| | 1992-1995 | Jeep YJ |
| | 1997-2003 | Jeep TJ |
| Ford | 1993-1997 | Ford Bronco |
| | 1993-2002 | Ford Explorer |
| | 1995-2001 | Ford Ranger 4x4 |
| | 1997-2002 | Mercury Mountaineer AWD |
| Mazda | 1993-2002 | Mazda Navajo |
| | 1995-2001 | 4x4 B-Series Pick-up |
| Nissan | 1996 | Pathfinder 4x4 |
| Subaru | 1990-1995 | Legacy AWD with 5MT |
| | 1993-1996 | Impreza AWD with 5MT |

Simple Steps for ABS Sensor Removal

- 1 Disconnect the battery.
- 2 Locate the ABS G-Force sensor in one of the four possible locations.
- 3 Remove the entire ABS G-Force sensor and place it in the *Switch Out* collection container.

NOTE: The ABS G-Force sensor modules should be placed in the *Switch Out* containers. Do not attempt to remove the mercury switch capsules from the sensor module.

NOTE: A comprehensive list of specific vehicles containing mercury switches, as well as other resources, can be found at www.switchout.ca